

Product implementation standard:
GB4706.1 GB4706.15

Product features and description

(1)Automatic operation

Put your hands into the induction area, the warm wind will be sent out automatically as to prevent bacterial infection.

(2)Power saving design

When the hand leaves the induction area, the machine stops working automatically, saving energy.

(3) Built-in high temperature protection

When the infrared sensor has a long time or the wind turbine is blocked, the internal temperature is raised, and the protection device stop working automatically.

(4)Unique shape

Use more freely, Can prevent dust and water from gathering, away from the wall of the tuyere so that your hands stretch more comfortable.

(5)Simple installation

attention

- (1)This machine should be installed on the wall that is not easy to shake.
- (2)Do not be installed on walls decorated with flammable materials to avoid fire or personal accident.
- (3)Do not plug the air inlet and air outlet.
- (4)In case of failure should be cut off the power to stop using and maintenance, contact with the dealer as quickly.
- (5)Prohibit to use of banana water, alcohol and other corrosive liquid scrub shell.
- (6)If the shell is contaminated, cut off the power and clean with a wet towel with soapy water.
- (7)Do not let the people who do not understand the electrical appliances to dismantle and repair.



AUTOMATIC HAND DRYER
INSTRUCTION MANUAL

Reminder

If the power cord is damaged, to avoid danger it must be replaced by the manufacturer or other maintenance department.

Technical parameters


Voltage / Frequency	220-240V~ 50-60Hz
Power	1800W
Air temperature	55℃ ±10℃
wind speed	>16m/sec
Induction distance	50-120mm
Product size	240x230x240mm

Simple fault processing method


Non induction	Check the plug and socket Whether are they in good contact?	It is recommended to retry in or connect the 220V power supply directly.
There is only cold wind and no hot wind	Pls check, whether are heating wire connector and temperature control switch disconnected	Check the connector and close the temperature control switch
Abnormal operation	Whether is sundries in the motor or wheel displaced?	Remove the sundries and adjust the wind wheel
Will not stop	Is there sundries in the front of the air outlet	Remove sundries
The heating wire becomes red and no wind	Open the panel tu check if the moter is damaged or displaced in transit	Adjust moter

Installation method

- 1.Fix the galvanized mounting bracket to the wall about 1.2 m above the ground.
- 2.Position the groove of back for hand dryer at the bracket and push down.

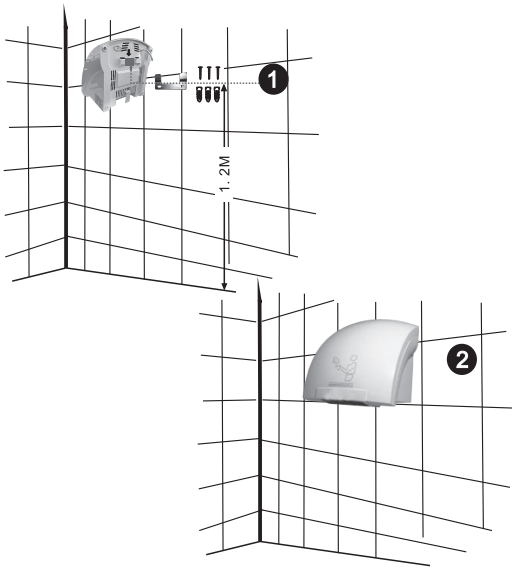

Power diagram

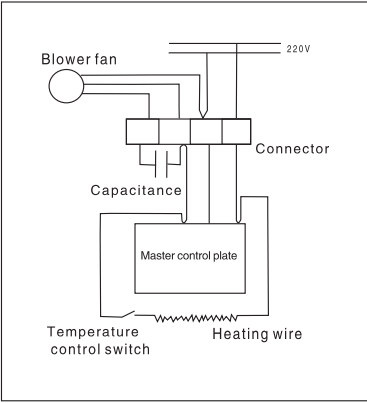

成品尺寸：190*205mm